

Raccords à Braser / COUDES

COUDES 90° petit Rayon :



C.PR90FF



C.PR90MF

<i>Code</i>	<i>Désignation</i>	<i>Code</i>	<i>Désignation</i>
C.PR90FF	3/8 FF	C.PR90MF	1/2 MF
C.PR90FF	1/2 FF	C.PR90MF	5/8 MF
C.PR90FF	5/8 FF	C.PR90MF	7/8 MF
C.PR90FF	3/4 FF	C.PR90MF	1"1/8 MF
C.PR90FF	7/8 FF	C.PR90MF	1"3/8 MF
C.PR90FF	1"1/8 FF	C.PR90MF	1"5/8 MF
C.PR90FF	1"3/8 FF	C.PR90MF	2"1/8 MF
C.PR90FF	1"5/8 FF	C.PR90MF	2"5/8 MF
C.PR90FF	2"1/8 FF	C.PR90MF	3"1/8 MF
C.PR90FF	2"5/8 FF	C.PR90MF	3"5/8 MF
C.PR90FF	3"1/8 FF	C.PR90MF	4"1/8 MF
C.PR90FF	3"5/8 FF		
C.PR90FF	4"1/8 FF		

COUDES 90° Grand Rayon :



C.GR90FF



C.GR90MF

<i>Code</i>	<i>Désignation</i>	<i>Code</i>	<i>Désignation</i>
C.GR90FF	1/4 FF	C.GR90MF	3/8 MF
C.GR90FF	3/8 FF	C.GR90MF	1/2 MF
C.GR90FF	1/2 FF	C.GR90MF	5/8 MF
C.GR90FF	5/8 FF	C.GR90MF	3/4 MF
C.GR90FF	3/4 FF	C.GR90MF	7/8 MF
C.GR90FF	7/8 FF	C.GR90MF	1"1/8 MF
C.GR90FF	1" FF	C.GR90MF	1"3/8 MF
C.GR90FF	1"1/8 FF	C.GR90MF	1"5/8 MF
C.GR90FF	1"3/8 FF	C.GR90MF	2"1/8 MF
C.GR90FF	1"5/8 FF	C.GR90MF	2"5/8 MF
C.GR90FF	2"1/8 FF	C.GR90MF	3"1/8 MF
C.GR90FF	2"5/8 FF	C.GR90MF	3"5/8 MF
C.GR90FF	3"1/8 FF		
C.GR90FF	3"5/8 FF		
C.GR90FF	4"1/8 FF		

COUDES 45° :



FC.45FF



C.45MF

<i>Code</i>	<i>Désignation</i>	<i>Code</i>	<i>Désignation</i>
C.45FF	1/4 FF	C.45MF	3/8 MF
C.45FF	3/8 FF	C.45MF	1/2 MF
C.45FF	1/2 FF	C.45MF	5/8 MF
C.45FF	5/8 FF	C.45MF	3/4 MF
C.45FF	3/4 FF	C.45MF	7/8 MF
C.45FF	7/8 FF	C.45MF	1"1/8 MF
C.45FF	1" FF	C.45MF	1"3/8 MF
C.45FF	1"1/8 FF	C.45MF	1"5/8 MF
C.45FF	1"3/8 FF	C.45MF	2"1/8 MF
C.45FF	1"5/8 FF	C.45MF	2"5/8 MF
C.45FF	2"1/8 FF	C.45MF	3"1/8 MF
C.45FF	2"5/8 FF	C.45MF	3"5/8 MF
C.45FF	3"1/8 FF	C.45MF	4"1/8 MF
C.45FF	3"5/8 FF		
C.45FF	4"1/8 FF		