

Raccords à Braser / MANCHONS

Manchons réduction F-F:

<i>Désignation</i>
3/8-1/4 FF
1/2-3/8 FF
1/2-1/4 FF
5/8-1/2 FF
5/8-3/8 FF
3/4-5/8 FF
3/4-1/2 FF
7/8-3/4 FF
7/8-5/8 FF
7/8-1/2 FF
7/8-3/8 FF
1"1/8-7/8 FF
1"1/8-3/4 FF
1"1/8-5/8 FF
1"3/8-1"1/8 FF
1"3/8-1"7/8 FF
1"5/8-1"3/8 FF
1"5/8-1"1/8 FF
1"5/8-7/8 FF
2"1/8-1"5/8 FF
2"1/8-1" 3/8 FF
2"1/8-1"1/8 FF
2"5/8-2"1/8 FF
2"5/8-1"5/8 FF
2"5/8-1"3/8 FF
2"5/8-1"1/8 FF
3"1/8-2"5/8 FF
3"1/8-2"1/8 FF
3"1/8-1"5/8 FF
3"1/8-3"1/8 FF
4"1/8-3"5/8 FF



Manchons réduction M-F:

<i>Désignation</i>
3/8-1/4 MF
1/2-3/8 MF
1/2-1/4 MF
5/8-1/2 MF
5/8-3/8 MF
3/4-5/8 MF
3/4-1/2 MF
7/8-3/4 MF
7/8-5/8 MF
7/8-1/2 MF
7/8-3/8 MF
1"1/8-7/8 MF
1"1/8-3/4 MF
1"1/8-5/8 MF
1"1/8-1/2 MF
1"3/8-1"1/8 MF
1"3/8-1"7/8 MF
1"5/8-1"3/8 MF
1"5/8-1"1/8 MF
2"1/8-1"5/8 MF
2"1/8-1"3/8 MF
2"1/8-1"1/8 MF
2"5/8-1"1/8 MF
2"5/8-2"1/8 MF
2"5/8-1"5/8 MF
3"1/8-2"5/8 MF
3"1/8-2"1/8 MF
3"1/8-1"5/8 MF
3"1/8-1"3/8 MF
3"5/8-3"1/8 MF
3"5/8-2"5/8 MF
3"5/8-2"1/8 MF
4"1/8-3"5/8 MF
4"1/8-3"1/8 MF

Manchons FF:



<i>Désignation</i>
3/16 FF
1/4 FF
5/16 FF
3/8 FF
1/2 FF
5/8 FF
3/4 FF
7/8 FF
1" FF
1"1/8 FF
1"3/8 FF
1"5/8 FF
2"1/8 FF
2"5/8 FF
3"1/8 FF
3"5/8 FF
4"1/8 FF